

# NPA-CP

## Pendant control station



Pendant station for direct control of industrial machines. Sturdy and handy, NPA-CP is specifically designed for heavy duty in industrial environments.

### FEATURES

- The cable sleeve can be angled up to 20° to give the operator the best view of all the control elements and enable a natural, comfortable working position.
- Rubber pushbuttons with symbol disks to ensure protection against dust and prevent jamming when the control station is used in harsh environments.
- Two-colour moulded pushbutton disks to guarantee clear reading and wear resistance
- The emergency stop mushroom pushbutton complies with standard EN 418.
- Positive opening NC contacts for safety functions.
- Mechanical life of switches: 1 million operations.
- IP protection degree: NPA-CP is classified IP65.
- Extreme temperature resistance: -25°C to +70°C.
- All materials and components used are wear resistant and guarantee protection of the unit against water and dust.

### OPTIONS

- Available in configuration from 2 to 8 actuators.
- 1 or 2 speed two-pole switches or 1 speed three-pole switches, with or without brake contact, for direct control.
- Mechanical interlock to prevent simultaneous operation of opposite functions.

### CERTIFICATIONS

- CE marking and EAC certification.

## CERTIFICATIONS

Conformity to Community Directives	2006/95/CE Low Voltage Directive
	2006/42/CE Machinery Directive
Conformity to CE Standards	EN 60204-1 Safety of machinery - Electrical equipment of machines
	EN 60947-1 Low-voltage switchgear and controlgear
	EN 60947-3 Low-voltage switchgear and controlgear - Switches, disconnectors, switch-disconnectors and fuse-combination units
	EN 60529 Degrees of protection provided by enclosures
	EN 418 Safety of machinery - Emergency stop equipment, functional
Markings and homologations	CE EAC

## GENERAL TECHNICAL SPECIFICATIONS

Ambient temperature	Storage -40°C/+70°C
	Operational -25°C/+70°C
IP protection degree	IP 65
Insulation category	Class II
Cable entry	2÷6 buttons: rubber cable sleeve (Ø 10÷18 mm)
	8 buttons: rubber cable sleeve (Ø 17÷26 mm)
Operating positions	Any position

## TECHNICAL SPECIFICATIONS OF THE MICROSWITCHES

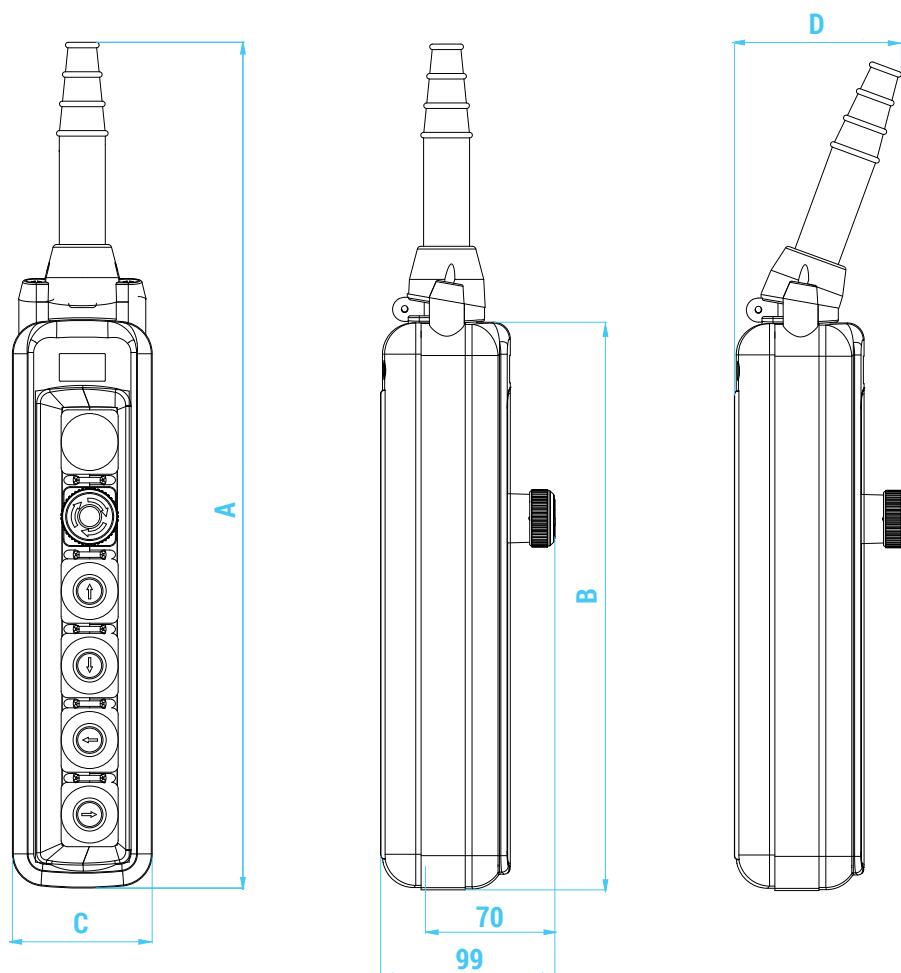
Code	PRSL0458PI	PRSL0459PI	PRSL0460PI
Utilisation category	AC 3 - AC 4	AC 3 - AC 4	AC 3 - AC 4
Rated operational current	10 A		
Rated operational voltage	400 Vac		
Rated operational power	2.2 kW		
Rated thermal current	20 A		
Rated insulation voltage	660 Vac		
Brake operating contact	-	100 Vac, 0.7 A, L/R=100 ms	-
Mechanical life	1x10 <sup>6</sup> operations		
Connections	Screw-type terminals with self-lifting pads		
Wires	1x2.5 mm <sup>2</sup> , 2x1.5 mm <sup>2</sup>		
Tightening torque	0.8 Nm		
Microswitch type	One speed, two-pole double switch	One speed, two-pole double switch, with brake contact	Two speeds, two-pole double switch
Scheme			
Markings and homologations	CE EAC		

Code	PRSL0461PI	PRSL0471PI
Utilisation category	AC 3 - AC 4	AC 3 - AC 4
Rated operational current	10 A	
Rated operational voltage	400 Vac	
Rated operational power	2.2 kW	
Rated thermal current	20 A	
Rated insulation voltage	660 Vac	
Brake operating contact	100 Vac, 0.7 A, L/R=100 ms	-
Mechanical life	1x10 <sup>6</sup> operations	
Connections	Screw-type terminals with self-lifting pads	
Wires	1x2.5 mm <sup>2</sup> , 2x1.5 mm <sup>2</sup>	
Tightening torque	0.8 Nm	
Microswitch type	Two speeds, two-pole double switch, with brake contact	One speed, three-pole double switch
Scheme		
Markings and homologations	CE ENEC	

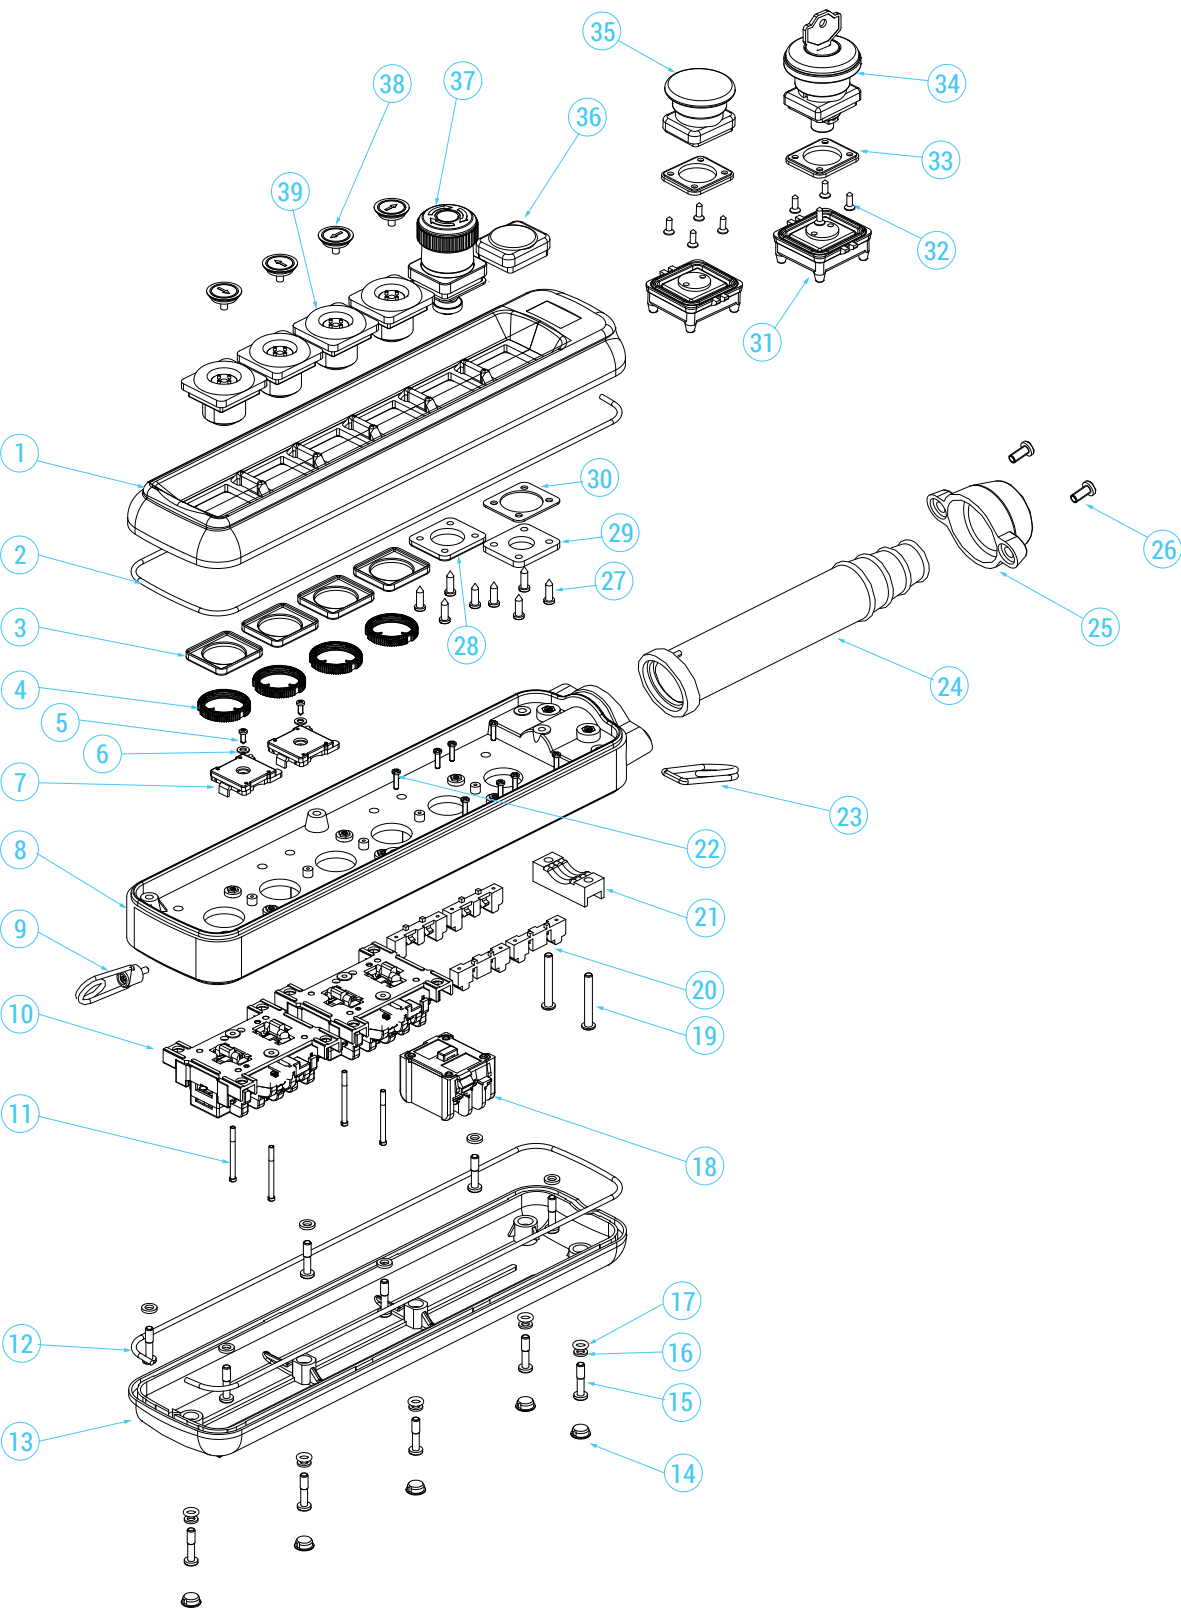
Code	PRSL0472PI	PRSL0508PI
Utilisation category	AC 3 - AC 4	AC 23B
Rated operational current	10 A	
Rated operational voltage	400 Vac	
Rated operational power	2.2 kW	
Rated thermal current	20 A	
Rated insulation voltage	660 Vac	
Brake operating contact	100 Vac, 0.7 A, L/R=100 ms	-
Mechanical life	1x10 <sup>6</sup> operations	
Connections	Screw-type terminals with self-lifting pads	
Wires	1x2.5 mm <sup>2</sup> , 2x1.5 mm <sup>2</sup>	
Tightening torque	0.8 Nm	
Microswitch type	One speed, three-pole double switch, with brake contact	One speed, three-pole single switch
Scheme		
Markings and homologations	CE ENEC	

## OVERALL DIMENSIONS (mm)

2




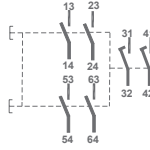


No. of buttons	Overall dimensions (mm)			
	A	B	C	D
2	292	140	76	87
3	333	181	76	87
4	372	222	76	87
6	459	307	76	87
8	605	393	83	116


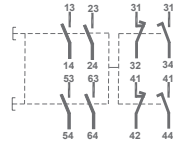








## STANDARD CONTROL STATIONS

Standard pendant stations are equipped with cable sleeve, hook and mechanical interlock between opposite functions pushbuttons.


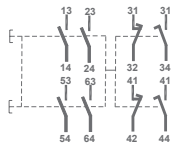


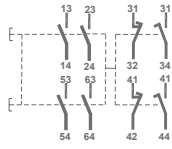


### 3 actuators


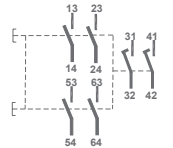


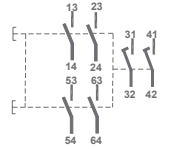


PF30030001		
Switch scheme	Switch type	Actuator type
	PRSL0508PI 3NC 1 speed	Latched mushroom pushbutton
	PRSL0471PI 1 speed three-pole	Pushbutton 
		Pushbutton 

PF30030003		
Switch scheme	Switch type	Actuator type
	PRSL0508PI 3NC 1 speed	Latched mushroom pushbutton
	PRSL0460PI 2 speeds two-pole	Pushbutton 
		Pushbutton 








PF30030004		
Switch scheme	Switch type	Actuator type
	PRSL0508PI 3NC 1 speed	Latched mushroom pushbutton
	PRSL0458PI 1 speed two-pole	Pushbutton 
		Pushbutton 

### 6 actuators

PF30060002		
Switch scheme	Switch type	Actuator type
	PRSL0508PI 3NC 1 speed	Latched mushroom pushbutton
-	-	Blanking plug
	PRSL0460PI 2 speeds two-pole	Pushbutton 
		Pushbutton 
	PRSL0460PI 2 speeds two-pole	Pushbutton 
		Pushbutton 


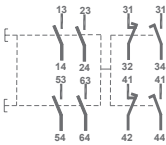


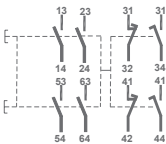


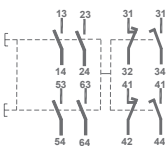


PF30060004		
Switch scheme	Switch type	Actuator type
	PRSL0508PI 3NC 1 speed	Latched mushroom pushbutton
-	-	Blanking plug
	PRSL0471PI 1 speed three-pole	Pushbutton 
		Pushbutton 
	PRSL0471PI 1 speed three-pole	Pushbutton 
		Pushbutton 

## PF30060019


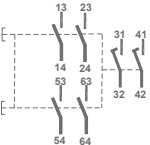


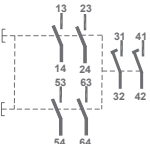


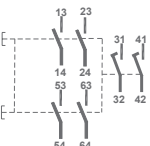


Switch scheme	Switch type	Actuator type
	PRSL0508PI 3NC 1 speed	Latched mushroom pushbutton
-	-	Blanking plug
	PRSL0458PI 1 speed two-pole	Pushbutton 
		Pushbutton 
	PRSL0458PI 1 speed two-pole	Pushbutton 
		Pushbutton 











## 8 actuators

## PF30080001

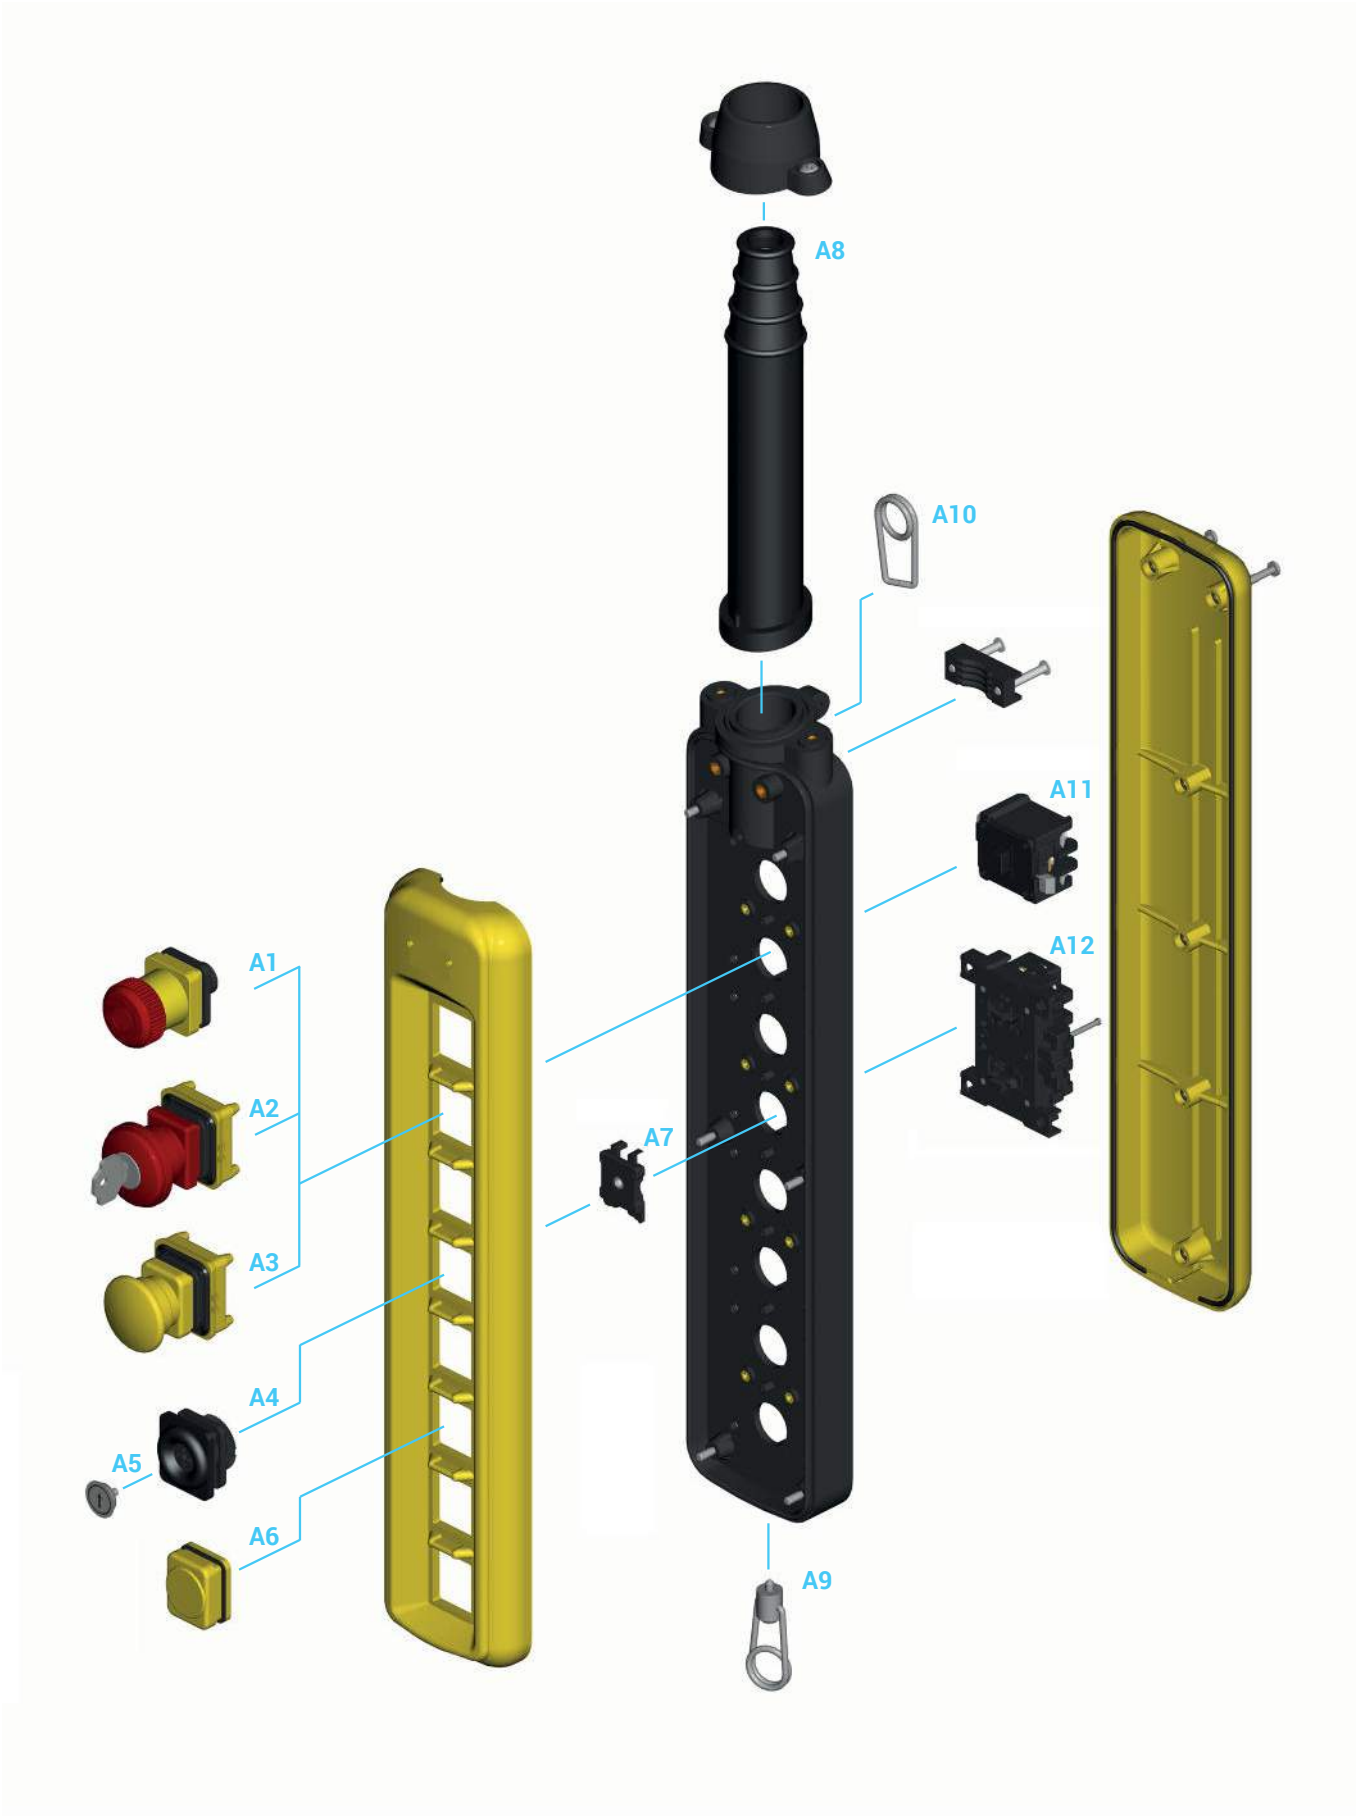
Switch scheme	Switch type	Actuator type
	PRSL0508PI 3NC 1 speed	Latched mushroom pushbutton
-	-	Blanking plug
	PRSL0460PI 2 speeds two-pole	Pushbutton 
		Pushbutton 
	PRSL0460PI 2 speeds two-pole	Pushbutton 
		Pushbutton 
	PRSL0460PI 2 speeds two-pole	Pushbutton 
		Pushbutton 

## PF30080010

Switch scheme	Switch type	Actuator type
	PRSL0508PI 3NC 1 speed	Latched mushroom pushbutton
-	-	Blanking plug
	PRSL0471PI 1 speed three-pole	Pushbutton 
		Pushbutton 
	PRSL0471PI 1 speed three-pole	Pushbutton 
		Pushbutton 
	PRSL0471PI 1 speed three-pole	Pushbutton 
		Pushbutton 

PF30080022		
Switch scheme	Switch type	Actuator type
	PRSL0508PI 3NC 1 speed	Latched mushroom pushbutton
-	-	Blanking plug
	PRSL0458PI 1 speed two-pole	Pushbutton 
		Pushbutton 
	PRSL0458PI 1 speed two-pole	Pushbutton 
		Pushbutton 
	PRSL0458PI 1 speed two-pole	Pushbutton 
		Pushbutton 


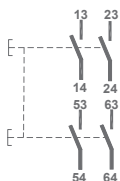
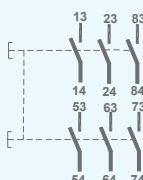
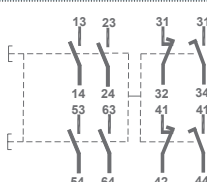
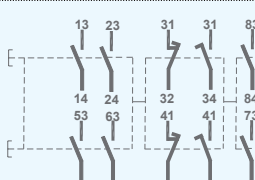
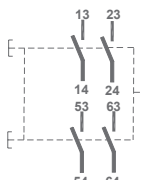
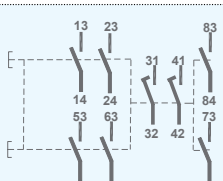









## COMPONENTS

## Switches




2

Ref.	Drawing	Description	Scheme	Code
A12		One speed, two-pole double switch		PRSL0458PI
		One speed, two-pole double switch, with brake contact		PRSL0459PI
		Two speeds, two-pole double switch		PRSL0460PI
		Two speeds, two-pole double switch, with brake contact		PRSL0461PI
		One speed, three-pole double switch		PRSL0471PI
		One speed, three-pole double switch, with brake contact		PRSL0472PI
A11		One speed, three-pole single switch, for mushroom pushbutton		PRSL0508PI


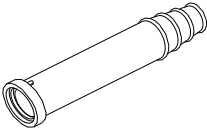


## Actuators

Ref.	Drawing	Description	Code
A6		Blanking plug	PRSL0517PI
A5		Disk for dust-tight pushbutton	PRTA_----- See standard disk
A4		Dust-tight pushbutton	PRSL0550PI
















## Mushroom pushbuttons

Ref.	Drawing	Description	Code
A1		Latched mushroom pushbutton for emergency stop	PRSL0600PI
A2		Key mushroom pushbutton	PRSL0520PI
A3		Impulse mushroom pushbutton	PRSL0512PI

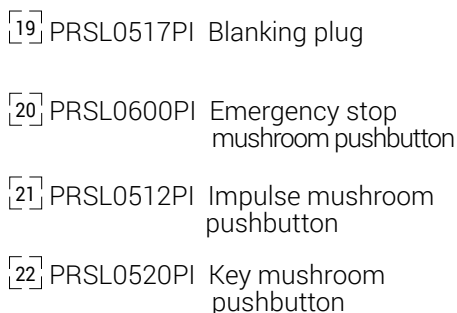
## Accessories

Ref.	Drawing	Description	Code
A7		Mechanical interlock	PRSL7817P
A8		Cable sleeve for 2 - 6 button units	PRGO0100PE
		Cable sleeve for 8 button units	PRGO0105PE
A9		Wire fixing	PRT06626PE
A10		Hook	PRGA0001PE

## Standard disks

RED										
PRTA002XPI	PRTA005XPI	PRTA006XPI	PRTA007XPI	PRTA008XPI	PRTA011XPI	PRTA012XPI	PRTA015XPI	PRTA016XPI	PRTA018XPI	
						YELLOW	WHITE	BLACK		
PRTA019XPI	PRTA022XPI	PRTA023XPI	PRTA026XPI	PRTA027XPI	PRTA097XPI	PRTA098XPI	PRTA099XPI			

## Control elements



## Instructions

- ### Remarks

- ☐ A PRSL0458PI Two-pole switch
- ☐ B PRSL0459PI Two-pole switch with brake contact
- ☐ C PRSL0471PI Three-pole switch
- ☐ D PRSL0472PI Three-pole switch with brake contact

<b>E</b>	PRSL0460PI	Two-pole switch
<b>F</b>	PRSL0461PI	Two-pole switch with brake contact

Diagram of a three-part assembly:

- Hook (light gray square)
- Cable sleeve (dark gray square)
- Control elements (dashed square)
- Switch (white square)
- MI (white rectangle)

Diagram illustrating a vertical cable assembly with four MI units and various control elements.

**Legend:**

- Hook (light gray square)
- Cable sleeve (dark gray square)

**Assembly Components:**

- Top Section:** A Hook and a Cable sleeve are positioned at the top.
- Switches:** A square switch is located to the left of the first MI unit.
- MI Units:** Four MI units are arranged vertically. Each unit consists of a circular component and a rectangular component labeled "MI".
- Control elements:** Square control elements are located to the right of each MI unit.

## USE AND MAINTENANCE INSTRUCTIONS

*The NPA-CP Pendant Control Station is an electromechanical device for low voltage control circuits (EN 60947-3) to be used as electrical equipment on machines (EN 60204-1) in compliance with the fundamental requirements of the Low Voltage Directive 2006/95/CE and of the Machine Directive 2006/42/CE.*

The pendant station is designed for industrial use and also for use under particularly severe climatic conditions (operational temperature from  $-25^{\circ}\text{C}$  to  $+70^{\circ}\text{C}$ , suitable for use in tropical environment). The equipment is not suitable for use in environments with potentially explosive atmosphere, corrosive agents or a high percentage of sodium chloride (saline fog). Oils, acids or solvents may damage the equipment; avoid using them for cleaning.

The switches (10) are designed for direct control of contactors or electromagnetic loads. Do not connect more than one phase to each switch (10, 18). Do not oil or grease the control elements (34, 35, 37, 39) or the switches 10, 18).

The installation of the pendant station shall be carried out by an expert and trained personnel. Wiring shall be properly done according to the current instructions.

Prior to the installation and the maintenance of the pendant station, the main power of the machinery shall be turned off.

### Steps for the proper installation of the pendant station

- Remove the screws (15) on the lower cover (13) to open the pendant station.
- Cut the variable section rubber cable sleeve (24) and insert the cable tight enough to guarantee protection against water and/or dust.
- Fix the cable to the cable sleeve (24) using a cable tie (not supplied).
- Strip the cable to a length suitable for wiring the switches (20, 28).

- Tape the stripped part of the cable.
- Fix the cable inside the pendant station using the cable clamp (21).
- Connect all the switches (10, 18) according to the contact scheme printed on the switches (tighten the terminal screws with a torque of 0.8 Nm; insertability of wires into the terminals  $1 \times 2.5 \text{ mm}^2$  -  $2 \times 1.5 \text{ mm}^2$ ).
- Close the pendant station checking the proper positioning of the rubber (12) in the cover (1) and of the "O" rings (17).
- Put the rubber caps for the screws (14) into the holes in the lower cover (13).

### Periodic maintenance steps

- Check the proper tightening of the screws (15) of the enclosure (1, 8, 13).
- Check the proper tightening of the switch (10, 18) terminal screws.
- Check all wiring (in particular where wires clamp into the switches).
- Check the conditions of the rubber (12) fit into the lower cover (13), of the rubber of the control elements (39) and of the cable sleeve (24).
- Check that the plastic enclosure (1, 8, 13) of the pendant station is not broken.

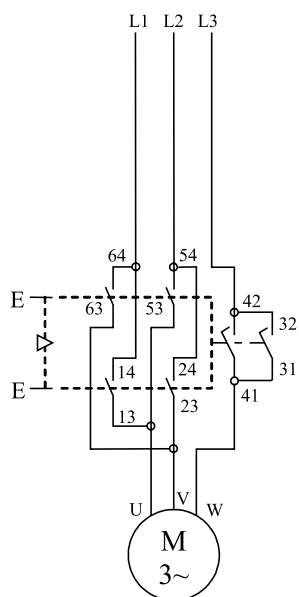
In case any component of the pendant station is modified, the validity of the markings and the guarantee on the equipment are annulled. Should any component need replacement, use original spare parts only.

TER declines all responsibility for damages caused by the improper use or installation of the equipment.

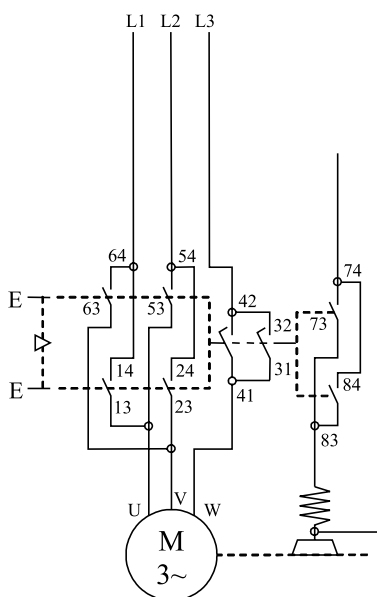
\* Please refer to the exploded drawing in the catalogue.

## Direct control circuits for 1 speed three-phase reversing motors

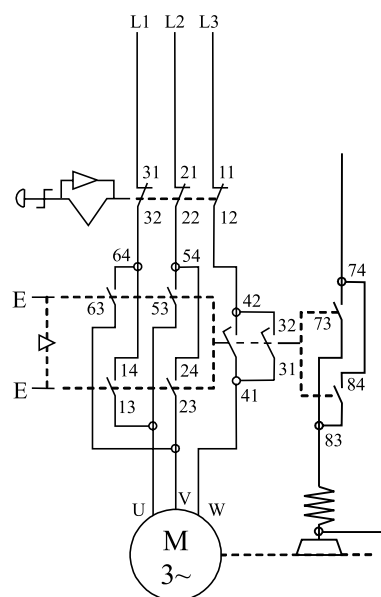
Circuits for 1 speed motors



Circuits for brake wiring

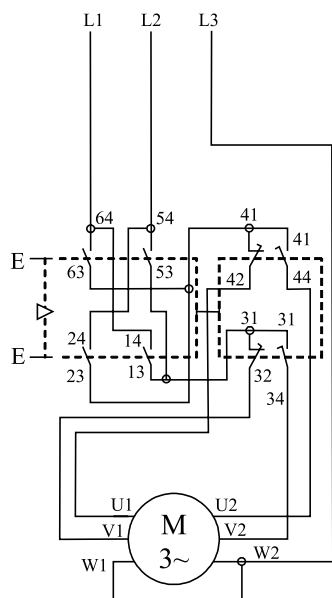


Circuits for brake and mushroom pushbutton wiring

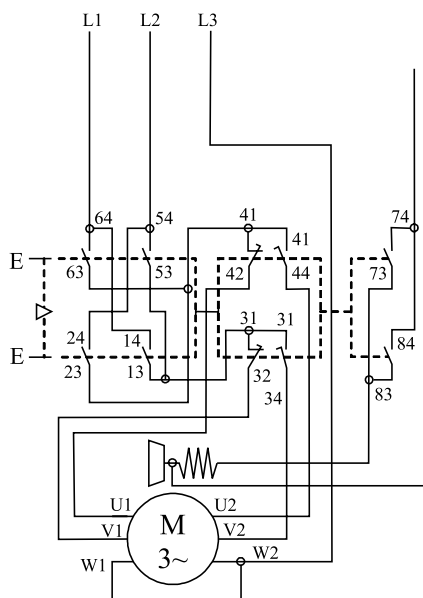


## Direct control circuits for 2 speed three-phase reversing motors

Circuits for 2 speed motors



Circuits for brake wiring



Circuits for brake and mushroom pushbutton wiring

